NEWPORT COTTAGES

www.newportcottages.com

**New Fixed Side**

**Fixed Gate Side**

1 Remove upper spool and lower pin using a hand held screwdriver exposing inserts

2 Remove inserts w/ allen wrench ( provided )

3 Install new inserts ( provided ) w/ allen wrench ( provided )

4 Attach new gate using allen bolts ( provided )

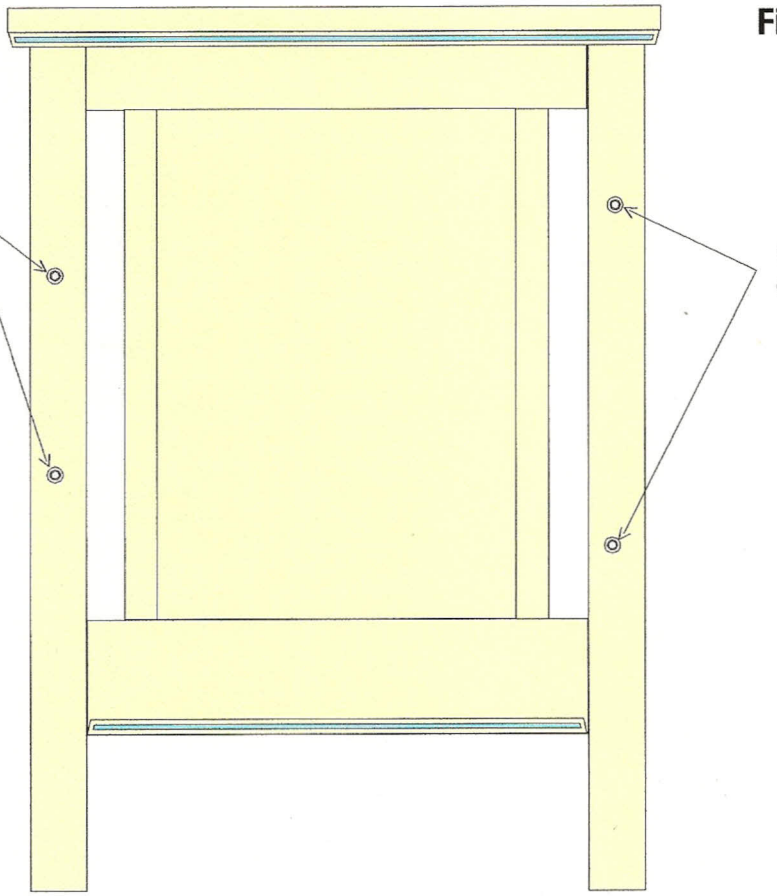

Existing hole with inserts already in place

## Installation Instructions

# Fixed Gate Conversion Kit

4111 Buchanan Avenue • Riverside, California 92503 • Tel. (951) 549-0590 Fax (951)549-0792